English

Installation Instruction



Suit for: VESA 100x100 VESA 200x100 VESA 200x200 VESA 300x300 VESA 400x200 VESA 400x400

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

• If you don't understand these directions or have any doubts about the safety of the installation.

• If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.



```
Step 1
```

WARNING

Mounting the Wall Plate to the Wall



installed it may fall, resulting in possible injury and/or damage.

Step 2

Install VESA Plate to the back of TV



First of all, make sure the diameter and length of the Bolt(d,e,f,g,h,i) your TV requires. Once you have determined the correct diameter and length, you will thread the Bolt into the TV using the correct Washer(j,k,I). Use the Spacer(m,n) only if the bolts are too longer.

Step 3 Mounting the TV to the Wall Plate





Step 4 Final Installation



Thanks for choosing our products, enjoy the using.