




# Instruction Manual

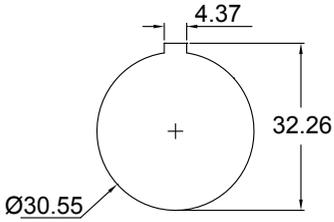


Recommended cutting on panel , panel thickness 0.7 ~ 2.0mm

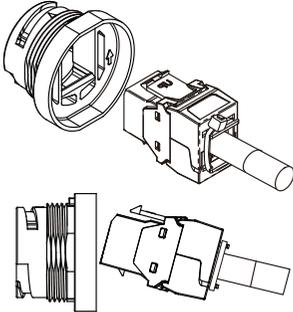

1. Finish the installation of Keystone Jack first. Place the Keystone Jack with latch side aligned to “↑” on the IP68 socket housing, snap the Keystone Jack into IP68 socket housing

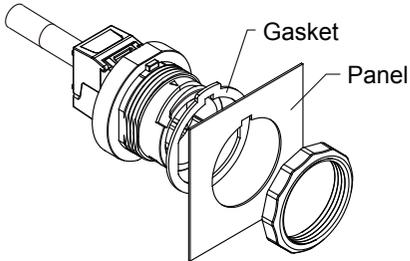

2. Place the IP68 socket housing to panel. Make sure to place the gasket in between panel and housing properly.

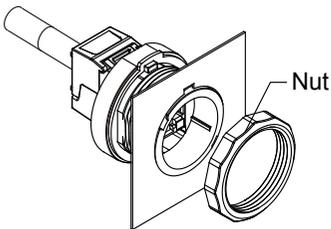

3. Screw on the nut to complete installation.

