



19" WANDGEHÄUSE FALTBAR

MONTAGEANLEITUNG

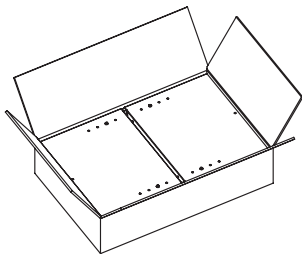

1


Öffnen Sie die Verpackung

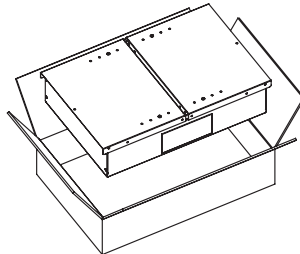

2


Nehmen Sie das Wandgehäuse aus der Verpackung und legen es auf die Rückseite

Breite: 540 mm
Tiefe: 450/600 mm

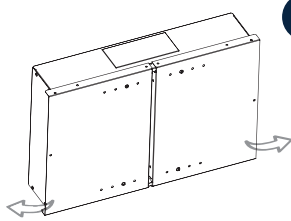


3

Öffnen Sie die aufklappbaren Seitenwände und entnehmen Sie die Zubehörteile aus dem Inneren

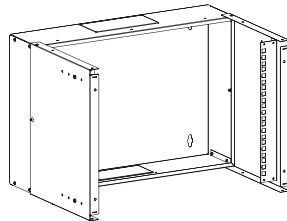


4

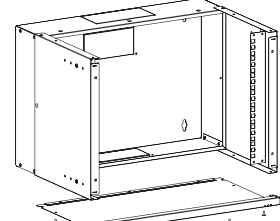


5

Montieren Sie die Bodenplatte durch Einsetzen der Kunststoff-Spreiznieten
Hinweis: das Bodenblech verfügt über keine Lüfterausbrüche

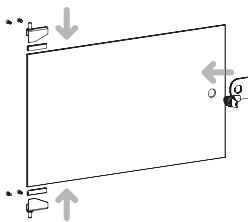


6

Scharniere und Schloss sind an der Glastür vormontiert
Achtung - gehen Sie vorsichtig vor, um das Glas nicht zu beschädigen

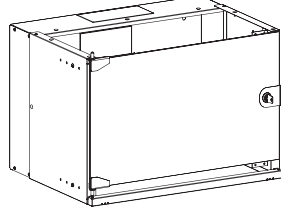


7

Befestigen Sie die Glastür unten am Gehäuse

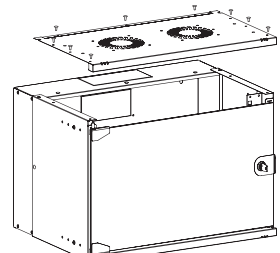



8

Montieren Sie nun das Dachblech mittels der Kunststoff-Spreiznieten
Hinweis: das Dachblech verfügt über vorgestanzte Lüfterausbrüche

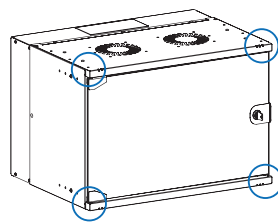

9

Biegen Sie die Laschen wie in der Abbildung gezeigt

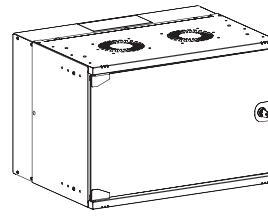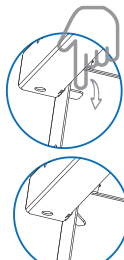


10

Das Wandgehäuse ist nun einsatzbereit


19" WALL HOUSINGS FOLDABLE

ASSEMBLY GUIDE

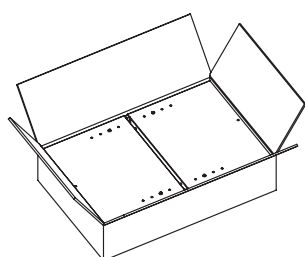

1


Open the box

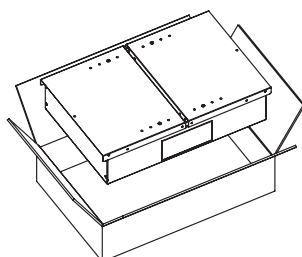

2


Take the wall housing out of the box and put in on the rear side

Width: 540 mm
Depth: 450/600 mm

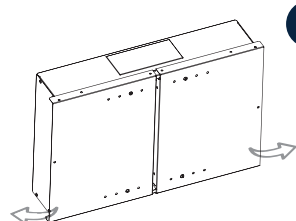


3

Fold-out the hinged side panels and take out the accessory parts from inside

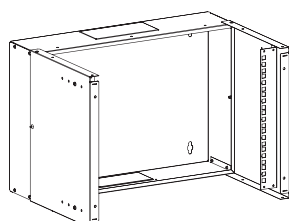


4

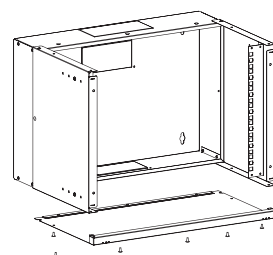


5

Assemble bottom sheet with special plastic rivets
Note: the bottom sheet has no fan cutouts

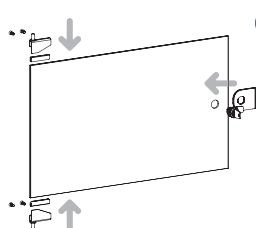


6

Hinges and lock parts are pre-assembled on the glass door
Note: take care not to damage the glass

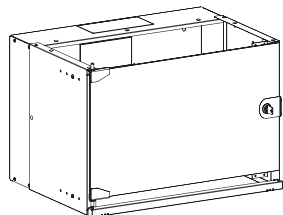


7

Fix the glass door to the bottom of the case

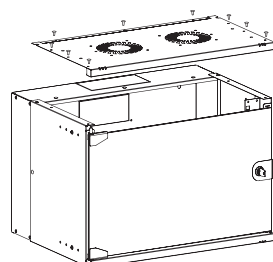


8

Assemble roof sheet with special plastic rivets
Note: the roof sheet has fan cutouts

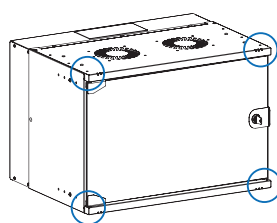

9

Bend the taps as shown in figure

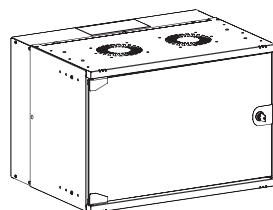

10

The wall housing now is ready to use