



# Instruction Manual

1. Finish the installation of Field Termination Plug first and insert it through the IP68 plug housing.

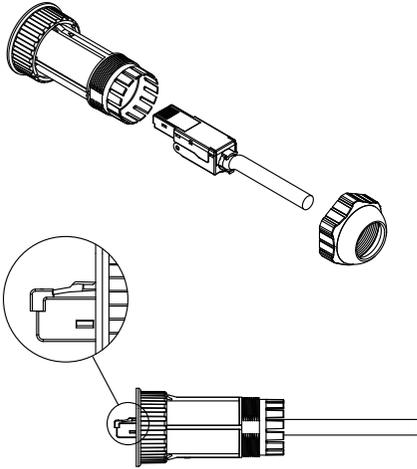

2. Ensure the latch on plug placed on the right position to the IP68 housing and locked properly inside the housing.

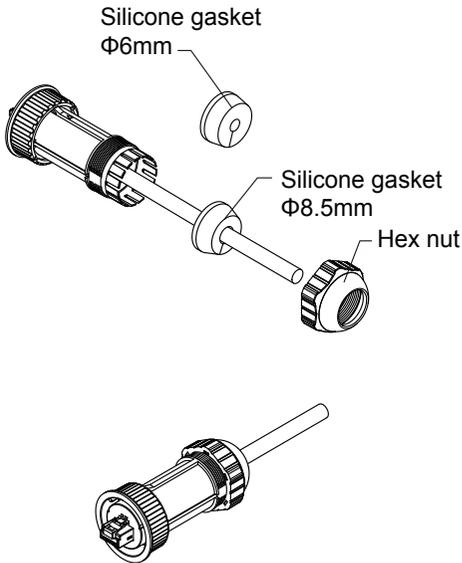

3. Place the silicon gasket and screw on the Hex Nut tightly to ensure the watertight function. Using a hex wrench to help when necessary.

Note: Silicon gasket available on 6mm or 8.5mm, pls select the proper size according to cable used.