


Instruction Manual

JACK PIN DESIGNATIONS	TIA / EIA T568A	TIA / EIA T568B	INDUSTRIAL
	1	White/Green	White/Orange
2	Green	Orange	
3	White/Orange	White/Green	White Blue
4	Orange	Green	
5	Blue	Blue	
6	White/Blue	White/Blue	
7	White/Brown	White/Brown	
8	Brown	Brown	


①

Remove the stopper before installation.

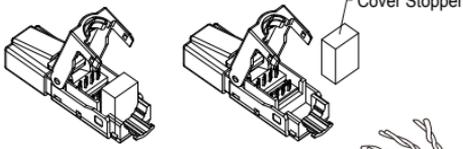


②

Insert cable through cable gland boots, strip off 1.2 inch of cable jacket, fold back the drain wire. Fan out all four twisted pairs, cut the conductors as shown.

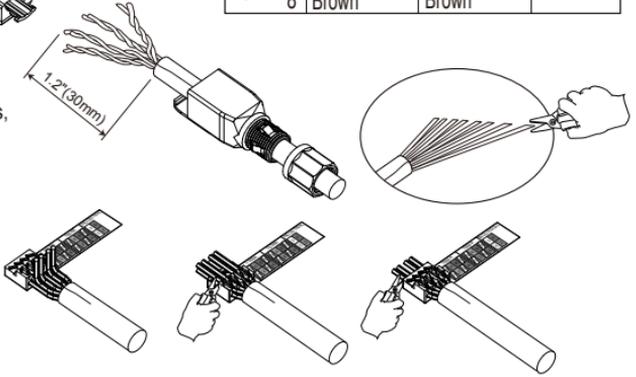


③

Following the color coding label and allocate each conductors into proper slots on wiring cap. Trim the ends of excess conductors.

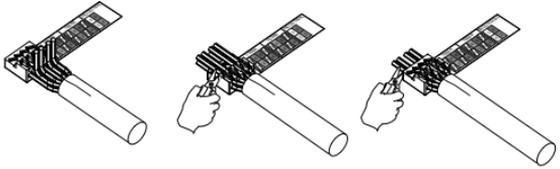


④

Remove the wiring label before place wiring cap on plug.

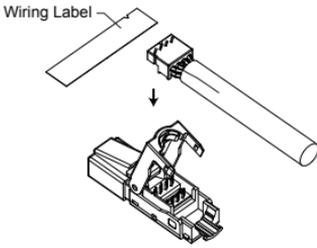


⑤

Place the wiring cap onto plug, use plier to clamp wiring cap until it completely snap-in to effect the connection.

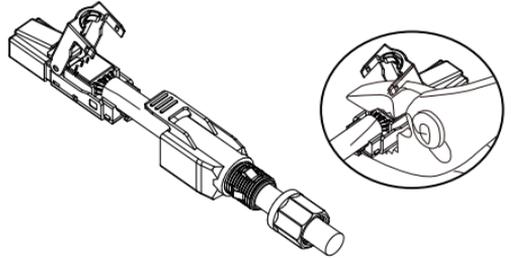

⑥

Close plug cover, make sure the drain wire is in proper contact with grounding clip on plug. Pull back cable gland boots to cover the plug. Rotate the cable gland to fasten and complete installation.

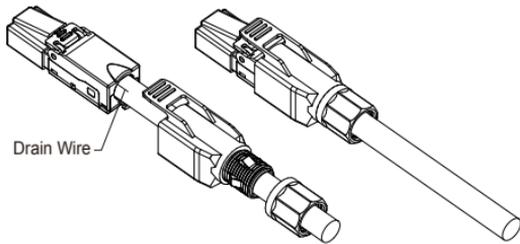

Unload the cable

Releasing the cable gland boots. Using flat screw driver and pry gently on plug cover one end first and the other end subsequently to open it.

