



①




Strip off 1.6 inch of cable jacket.
Fold back the drain wire.

②

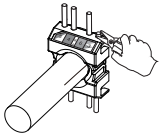

Insert a cable into the termination cap and fan out all four twisted pairs. Following the instruction of the color-coded wire position printed on the termination cap, position conductors into the slots and make sure the conductors are in the proper slot. Trim the ends of the conductors


③

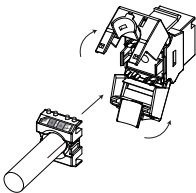

Install the termination cap to outlet, which will also allocate the conductors sitting on the slots.

JACK PIN DESIGNATIONS	TIA / EIA T568A		TIA / EIA T568B	
	1	White/Green	White/Orange	White/Orange
	2	Green	Orange	Orange
	3	White/Orange	White/Green	White/Green
	6	Orange	Green	Green
	4	Blue	Blue	Blue
	5	White/Blue	White/Blue	White/Blue
	7	White/Brown	White/Brown	White/Brown
	8	Brown	Brown	Brown


④

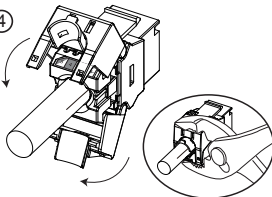

Secure the hinged outlet by using a crimp tool until it completely snap to effect the connection.

⑤

Cable Fixture Place

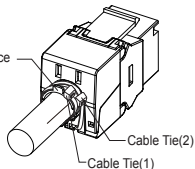

Fasten cable tie(1) to secure the grounding. Optional cable tie(2) for securing of flaps.

95x80mm