



FOS-3110 Series

10-port L2+ Managed Gigabit Fiber Switch

User's Guide

Version: 1.0

Revision History

Version	Date	Changes
0.9	11/10/2017	First release
1.0	01/17/2018	Modify the key features and add the description of a new rack installation method.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Trademarks

CTS is a registered trademark of Connection Technology Systems Inc
All trademarks belong to their respective proprietors.

Contents subject to change without prior notice.

Copyright Statement

Connection Technology Systems Inc Copyright © 1998-2018

This publication may not be reproduced as a whole or in part, in any way whatsoever unless prior consent has been obtained from Connection Technology Systems Inc.

Table of Contents

Revision History	ii
TABLE OF CONTENTS	III
CHAPTER 1. INTRODUCTION.....	2
1.1 OVERVIEW OF FOS-3110	2
1.2 KEY FEATURES	3
1.3 FRONT & REAR PANELS.....	4
1.3.1 Front Panel.....	4
1.3.2 Rear Panel	5
1.4 LED DEFINITIONS	6
1.5 CABLE SPECIFICATIONS	8
CHAPTER 2. INSTALLATION	9
2.1 INSTALLATION REQUIREMENTS	10
2.2 CHECKING THE PACKAGE CONTENTS	10
2.3 INSTALLING THE MANAGED SWITCH	11
2.3.1 Desktop Installation.....	11
2.3.2 Rack Installation	12
2.3.2.1 Install a Single FOS-3110 Switch in a Rack.....	12
2.3.2.2 Install two FOS-3110 Switches in a Rack Using FOS Combine Kit	14
2.3.2.3 Install a Single/Two FOS-3110 Switches in a Rack Using 19-inch Rack-mount Bracket.....	17
2.4 POWERING ON THE MANAGED SWITCH.....	19
2.5 CONNECTING THE MANAGED SWITCH TO THE NETWORK	19
CHAPTER 3. OPERATION.....	20
3.1 NETWORK MANAGEMENT	20
CHAPTER 4. MAINTENANCE	22
4.1 FAULT IDENTIFICATION	22
4.1.1 Local Check	22
4.1.2 Remote Check.....	23
4.2 HARDWARE REPLACEMENT PROCEDURES	23
4.3 FIRMWARE UPGRADE.....	23

About this manual

In this user's guide, it will not only clearly introduce CTS FOS- 3110 Managed Switch but tell you how to install this Managed Switch with detailed instructions.

Organization of the Manual

- Chapter 1 "Introduction" describes the features of the Managed Switch
- Chapter 2 "Installing the Managed Switch"
- Chapter 3 "Operation"
- Chapter 4 "Maintenance"

1

Introduction

CTS's Managed Switch is designed to meet the emerging FTTX & Metro Ethernet requirements. Its low profile appearance with 1U height and the standard rack-mounted size achieve the highest density within a single rack. When massive fiber ports need to be deployed, the Managed Switch provides the best performance and price ratio.

1.1 Overview of FOS-3110

FOS-3110, a compact 8.5-inch and rack mountable Managed Switch, has 8 ports Gigabit SFP + 2 combo uplink ports (10/100/1000Base-T and 100/1000Base-X SFP) in the front panel. This Managed Switch provides high performance, store and forward switching capability plus other advanced features such as QoS, VLAN, Spanning Tree, LACP and so on.

LED indicators located on the front panel ease the users' effort to monitor and manage the network status. The built-in management module also allows users to configure, control and monitor the system locally via console or remotely via SNMP_ based management system.

This Managed Switch is a typical SFP solution to Metro Ethernet application. Besides, it can be used as a stand-alone switch. With the height of 1U and the half-size rack design in appearance, FOS-3110 can be used in closet wiring as well, which is especially suitable for the small cabinet and narrow space installation environment.

1.2 Key Features

- **8.5 inch, 1U high**
- **8 x 100/1000Base-X ports**
 - IEEE 802.3/802.3u/802.3ab/802.3z compliance
 - Support Auto-Sensing for fiber ports
 - Support MDI/MDIX/Auto-Crossover
 - SFP Slot
- **2 x 10/100/1000Base-T, 100/1000Base-X Combo ports**
 - IEEE 802.3ab/802.3z
 - Support Auto-Negotiation (RJ-45) and Auto-Sensing (SFP)
 - Support MDI/MDIX/Auto-Crossover
 - RJ-45 or SFP Slot
- **Switching Features**
 - Store & forward switching
 - Non-blocking switching fabric : 20Gbps
 - Mac address table:8K
 - Memory buffer total 524K bytes
 - VLANs support up to 2K VLAN Groups
 - Support jumbo frame on all ports up to 9K bytes size
 - QoS classification based on IEEE802.1p, TOS/DSCP
 - 802.1Q Tunneling (QinQ)
 - Rate limit control
 - SNTP time server
 - Static multicasting
 - IGMP v1/v2/v3 snooping
 - IGMP fast leave
 - IGMP filtering via filtering profile
 - Multicast channel limitations per port
 - DHCP snooping
 - DHCP client and auto-provision
 - DHCP relay agent with option 82
 - Access Control List (ACL)
- **Management Functions**
 - Console
 - Telnet/CLI
 - Web
 - RADIUS authentication
 - SNMP v1/v2/v3 and network management
 - SNMP Power-Down Trap
 - Private, RFC-1213, RMON MIBs
 - Port mirroring
 - FTP, TFTP, HTTP server and client firmware upgrade

1.3 Front & Rear Panels

1.3.1 Front Panel

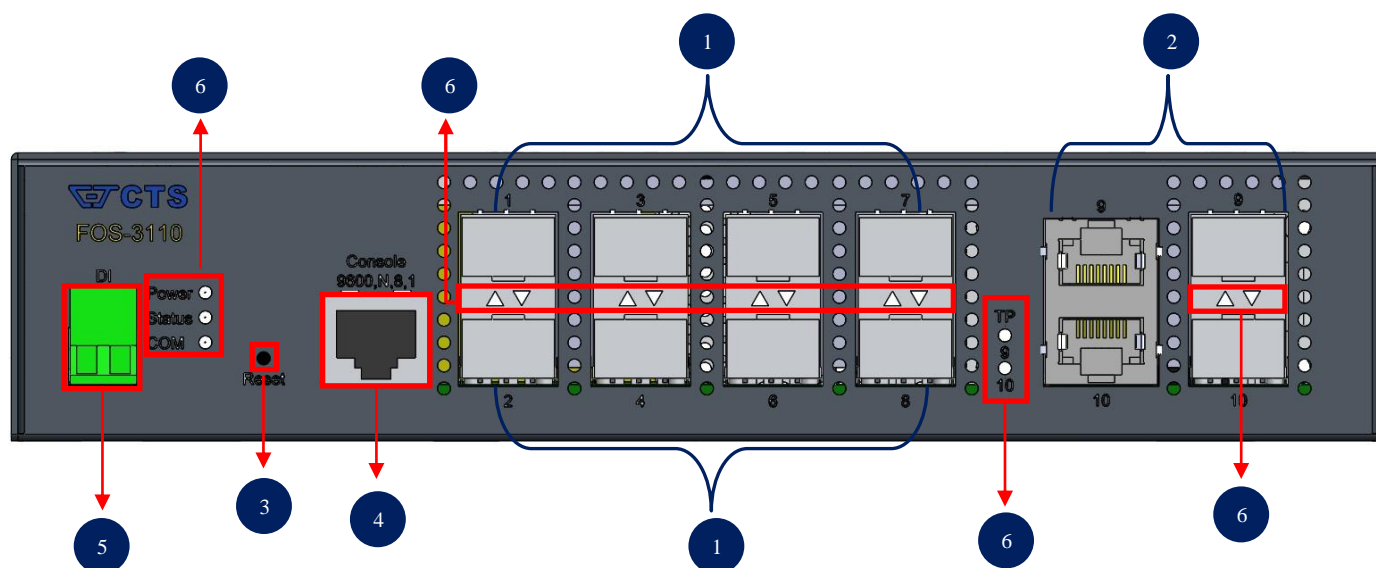


Figure 1-1. FOS-3110 Managed Switch Front Panel

The interfaces on the front panel of the Managed Switch are described below:

1. **8 x 100/1000Base-X SFP ports (Ports 1-8)**
2. **2 x Gigabit combo ports (Ports 9-10):**
 - 2 x 10/100/1000Base-T RJ-45 ports, or
 - 2 x 100/1000Base-X SFP ports
3. **Reset Button:**
 - Press the reset button for 5~10 seconds, then release it to restart the system.
 - Press the reset button for more than 10 seconds, then release it to reset the Managed Switch. The settings will be back to the factory defaults and restart the system.
4. **Console Port:**
 - An asynchronous serial console port supports the RS-232 electrical specification. The console port can be used to manage the device, and the serial console port settings should be configured as 9600, 8, n, 1.
5. **Digital Input (Dry Contact):**
 - A voltage-free connector that is used to decide whether the trigger occurs or not by detecting its open/close status. The configuration is as follows:
 - Open: Logic Level 0
 - Close: Logic Level 1
6. **LEDs:**
 - Includes Power LED, Status LED, COM LED, LEDs of Fiber1~8 ports and LEDs of TP & Fiber 9~10 ports. For more details on LEDs description, please refer to Section [1.4 LED Definitions](#).

1.3.2 Rear Panel

The Managed Switch provides one fixed power module. The type of power module is AC input.

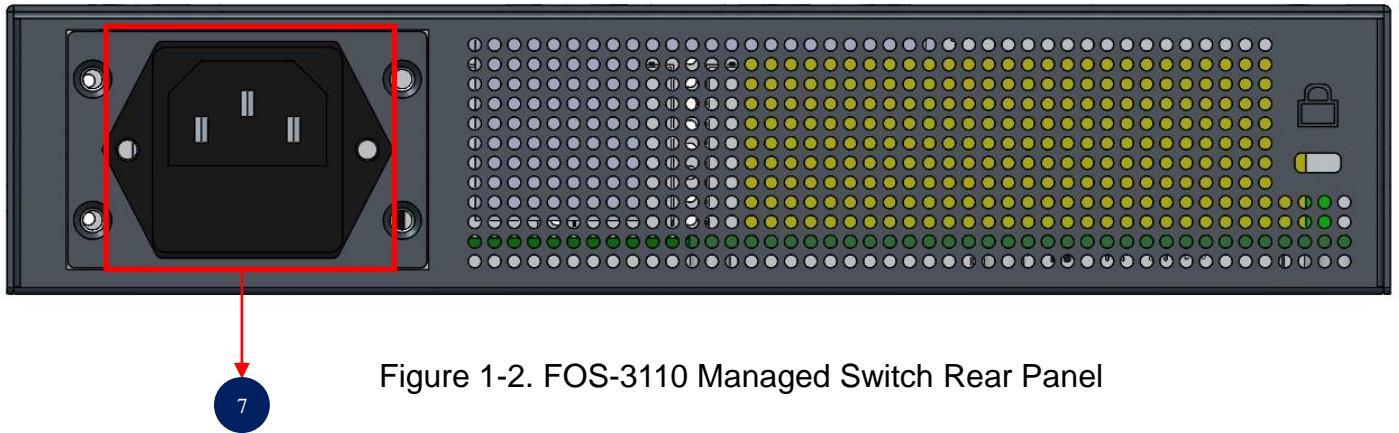


Figure 1-2. FOS-3110 Managed Switch Rear Panel

The interface on the rear panel of the Managed Switch is described below:

7. Power module and Connector:

- AC power connection: 100-240V, 50/60Hz, 0.4A~0.2A

1.4 LED Definitions

The Managed Switch is Plug & Play compliant. The real-time operational status can be monitored through a set of LED indicators located in the front panel.

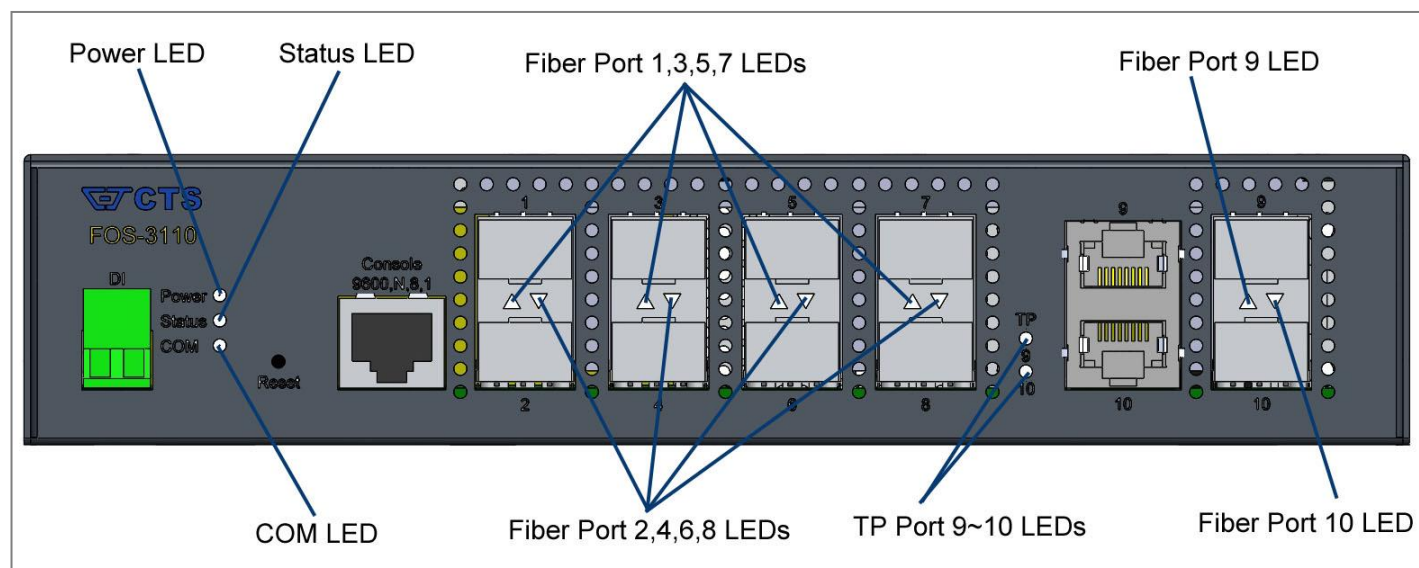


Figure 1-3. LEDs of FOS-3110 Managed Switch

Power LED

The power status of the Managed Switch is indicated by the Power LED on the front panel of the device.

LED	Color	Operation
Power	OFF	No fixed-in power module exists or power is off.
	Green	Lit when power module is in normal operation.

Status LED

The Managed Switch status is indicated by the Status LED on the front panel of the device.

LED	Color	Operation
Status	Green	Lit when the device is in normal operation.
	Orange	Lit when the device is booting up or press the Reset button for 5~10 seconds and then release to restart the system.
		Blinking when press the Reset button for more than 10 seconds and then release to reset (return to factory default settings) and restart the system. The LED indicator will blink in orange color for three times.

COM LED

The console status is indicated by the COM LED on the front panel of the device.

LED	Color	Operation
COM	OFF	Either the console port is not activated or no session exists.
	Green	Lit when the console port is activated and the session exists.

F/O 1~8 Port LEDs

LED	Color	Operation
Link/ACT/ Speed	OFF	No connection exists.
	Green	Lit when Fiber 100Mbps port link is up. Blinking when Fiber port is receiving and transmitting data at the speed of 100Mbps.
	Orange	Lit when Fiber 1000Mbps port link is up. Blinking when Fiber port is receiving and transmitting data at the speed of 1000Mbps.

TP & F/O 9~10 Port LEDs

LED	Media Type	Color	Operation
Link/ACT/ Speed	TP	OFF	No connection exists.
		Green	Lit when the 10/100Mbps port link is up. Blinking when TP port is receiving and transmitting data at the speed of 10/100Mbps.
		Orange	Lit when the 1000Mbps port link is up. Blinking when TP port is receiving and transmitting data at the speed of 1000Mbps.
	F/O	OFF	No connection exists.
		Green	Lit when the 100Mbps port link is up. Blinking when Fiber port is receiving and transmitting data at the speed of 100Mbps.
		Orange	Lit when the 1000Mbps port link is up. Blinking when Fiber port is receiving and transmitting data at the speed of 1000Mbps.

1.5 Cable Specifications

The following table contains various cable specifications for the Managed Switch. Please make sure that you use the proper cable when connecting the Managed Switch.

Cable Type	Description
10Base-T	UTP Category 3, 4, 5 (100 meters max.) EIA/TIA- 568 150-ohm STP (100 meters max.)
100Base-TX	UTP Cat. 5 (100 meters max.) EIA/TIA-568 150-ohm STP (100 meters max.)
1000Base-T	UTP Cat. 5e (100 meters max.) UTP Cat. 5 (100 meters max.) EIA/TIA-568B 150-ohm STP (100 meters max.)
100BASE-FX	Multi-mode fiber module(2km) / Single-mode fiber module
1000BASE-SX	Multi-mode fiber module (550m)
1000BASE-LX	Single-mode fiber module (10km)
1000BASE-LH	Single-mode fiber module (30km/50km)
1000BASE-ZX	Single-mode fiber module (80km)
SFP Transceiver	SFP Transceiver for 1000BASE-SX Multi-mode fiber module (550m) SFP Transceiver for 1000BASE-LX Single-mode fiber module (10km) SFP Transceiver for 1000BASE-LH Single-mode fiber module (30km/50km) SFP Transceiver for 1000BASE-ZX Single-mode fiber module (80km)

Installation

To properly install the FOS-3110 Managed Switch, please follow the procedures listed below. These procedures will be respectively described in detail in the following sections.

- Installation Requirements
- Checking the Package Contents
- Installing the Managed Switch
- Powering on the Managed Switch
- Connecting the Managed Switch to the Network

2.1 Installation Requirements

Basic requirements for installation are as follows:

- Environmental conditions
 - One power outlet
 - Proper ventilation
 - Proper isolation to electrical noise, radio, etc.
 - UTP cables should not run in the same duct with power and phone line cables
- Required SFP Transceiver or UTP cables
- Rack mounting tools

2.2 Checking the Package Contents

Unpack the package carefully and check the package contents. The package should contain the following items:

- One set of the Managed Switch
- 19-inch rack-mount kit:
 - 1x long mounting bracket and 2x regular mounting brackets
 - Screws
- Four rubber feet with adhesive backing
- Console RS-232 cable with RJ-45 connector
- Documentation CD
- AC power cord (For AC power module only)
- FOS combine kit between two Switches in 19-inch rack. *(Optional)*
 - 4x L-shaped fixed pieces
 - Screws
- 19-inch rack-mount bracket. *(Optional)*
 - Screws

If any item is found missing or damaged, please contact your local sales representative for support or replacement.

2.3 Installing the Managed Switch

You can install the FOS-3110 switch on a flat surface or mount it in a standard 19-inch network equipment rack.



CAUTION

To prevent any damage or failure of the Managed Switch, please DO NOT block the ventilation holes.

Use the following guidelines when choosing a place to install the switch:

- Firm and steady flat surface.
- Proper power outlet location, not too far from the device.
- Visually inspect the power cord and see that it is secured to the AC power connector.
- Make sure that there is proper heat dissipation from and adequate ventilation around the switch. Do not place heavy objects on the Managed Switch.

2.3.1 Desktop Installation

The switch can be placed in any flat and steady surface with proper air ventilation. Four rubber feet with adhesive backing are provided for this kind of installation.

Procedures

- ❶ Attach rubber feet on the bottom at each corner of the device.
- ❷ Select a flat and steady surface to place the switch.
- ❸ Allow adequate space for ventilation between the device and the objects around it.

2.3.2 Rack Installation

Either you can install an 8.5-inch switch or two 8.5-inch switches in a standard 19-inch network equipment rack. In the following sections, we will take the FOS-3110 Managed Switch for example to separately demonstrate how to mount it or them in this size of rack space.



WARNING!

Please mount the Switch firmly in rack, otherwise it may fall and cause the system damage and possible injury to personnel.

2.3.2.1 Install a Single FOS-3110 Switch in a Rack

To install one set of FOS-3110 in a single rack space, you need the 19-inch rack-mount kit supplied with the switch. Just follow the procedures listed below for step-by-step instructions to install your switch in this rack space:

Step 1. Attach the supplied rack mounting brackets to the switch:

- 1.1. Attach the supplied regular mounting bracket to one side of the switch that you would like to install in the rack. (See Figure 2-1)
- 1.2. Attach the supplied long mounting bracket to the other side of the switch. (See Figure 2-1)

Step 2. Insert the screws provided in the rack-mount kit through each bracket and into the bracket mounting holes in the switch. (See Figure 2-1)

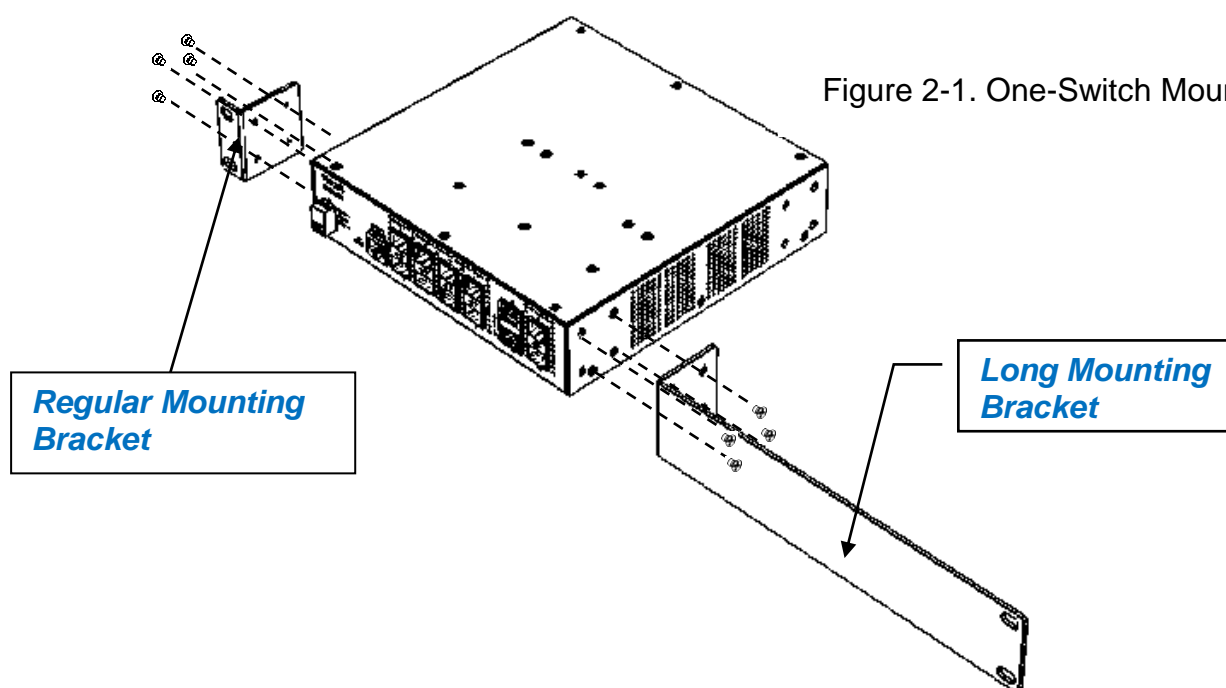


Figure 2-1. One-Switch Mounting

Step 3. Then, tighten the screws with the screwdriver to secure each bracket.

Step 4. Align the mounting holes in the brackets with the desired holes in the rack, and insert screws through each bracket and into the rack.

Step 5. Then, tighten the screws with the screwdriver to secure mounting brackets to the rack.

Step 6. Please ensure that the ventilation holes are not blocked.

2.3.2.2 Install two FOS-3110 Switches in a Rack Using FOS Combine Kit

To install two sets of FOS-3110 in a single rack space, you need the 19-inch rack-mount kit as well as the FOS combine kit, supplied with the switch. Also follow the procedures listed below for step-by-step instructions to install your switches in this rack space:

Step 1. On the switch that will be mounted on the left side of the rack space, do the following:

- 1.1. Refer to Section 2.3.2.1 to attach the supplied regular mounting bracket to the left side of this switch.
- 1.2. Insert the screws provided in the rack-mount kit through the bracket and into the bracket mounting holes in the switches.
- 1.3. Tighten the screws with the screwdriver to secure the bracket.
- 1.4. On the right side of the switch, attach one L-shaped fixed piece by inserting the screws provided in the FOS combine kit through this fixed piece and into the mounting holes in the switch. (See Figure 2-2)
- 1.5. Repeat the same manners as we had mentioned in Step 1.4 to install another L-shaped fixed piece on the same side of this switch. (See Figure 2-2)

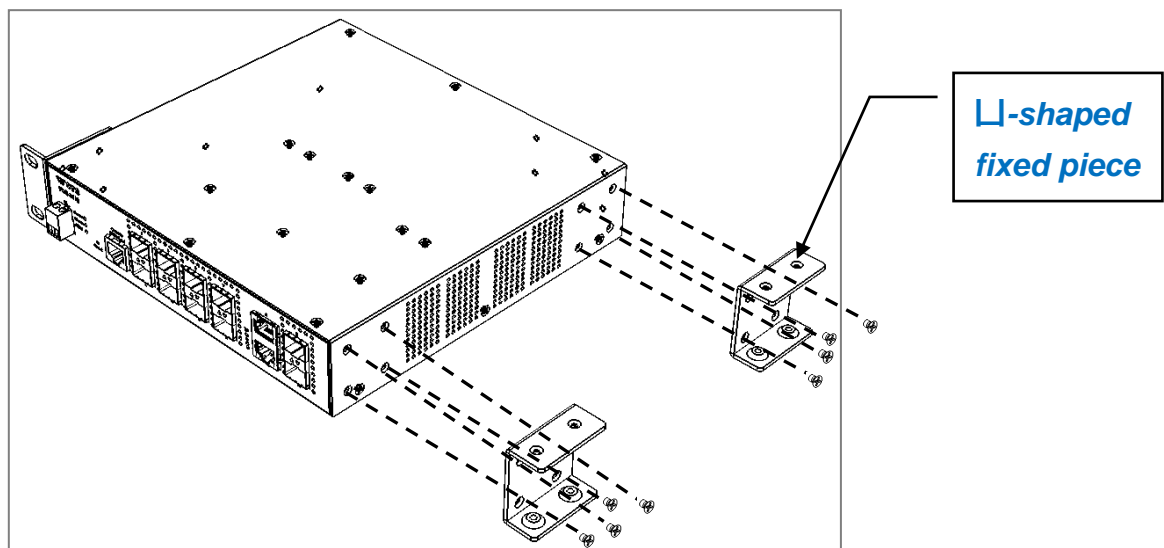


Figure 2-2. Install the L-shaped fixed pieces for two-switch mounting

- 1.6. Tighten the screws with the screwdriver to secure each middle mount to the right side of the switch.

Step 2. On the other switch that will be mounted on the right side of the rack space, do the following:

- 2.1. Also refer to Section 2.3.2.1 to attach the supplied regular mounting bracket to the right side of this switch.
- 2.2. Insert the screws provided in the rack-mount kit through the bracket and into the bracket mounting holes in the switches.
- 2.3. Tighten the screws with the screwdriver to secure the bracket.

- 2.4.** On the left side of the switch, attach one L-shaped fixed piece in the reverse direction by inserting the screws provided in the FOS combine kit through this fixed piece and into the mounting holes in the switch. (See Figure 2-3)
- 2.5.** Repeat the same manners as we had mentioned in Step 2.4 to install another L-shaped fixed piece on the same side of the switch. (See Figure 2-3)

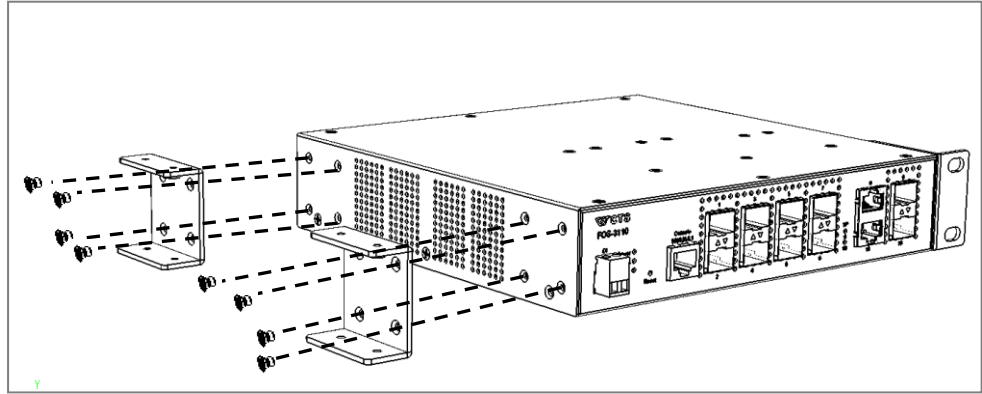


Figure 2-3. Install the L-shaped fixed pieces in the reverse direction for two-switch mounting

- 2.6.** Tighten the screws with the screwdriver to secure each middle mount to the left side of the switch.
- Step 3.** Align the holes of the middle mount described in Step 1 on the left switch with the holes of the middle mount described in Step 2 on the right switch, and then lock them together carefully.
- Step 4.** Insert the screws provided in the FOS combine kit through the holes into each middle mount. (See Figure 2-4)

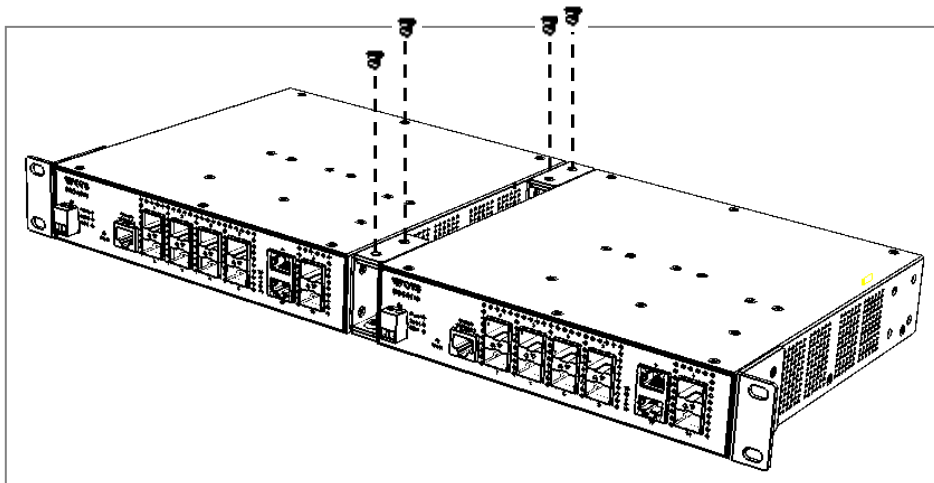


Figure 2-4. Screw the locked switches for two-switch mounting

- Step 5.** Tighten the screws with the screwdriver to secure each middle mount.

Step 6. Align the mounting holes in the regular brackets on both sides (the left side of the left switch and the right side of the right switch) with the desired holes in the rack, and insert the screws through each bracket and into the rack.

Step 7. Tighten the screws with the screwdriver to secure mounting brackets to the rack.

2.3.2.3 Install a Single/Two FOS-3110 Switches in a Rack Using 19-inch Rack-mount Bracket

Besides the mounting methods we previously mentioned, to install one or two sets of FOS-3110 in a single rack space; alternatively, you can use the 19-inch rack-mount bracket supplied with the switch. Also follow the procedures listed below for step-by-step instructions to install your switch/switches in this rack space:

Step 1. On the switch that will be mounted on the left side of the rack space, do the following:

- 1.1. Four bracket mounting holes for 19-inch rack-mount bracket are located at the bottom of each switch. (See Figure 2-5). Align these holes of this switch with the mounting holes on the most left side of the bracket you purchase.

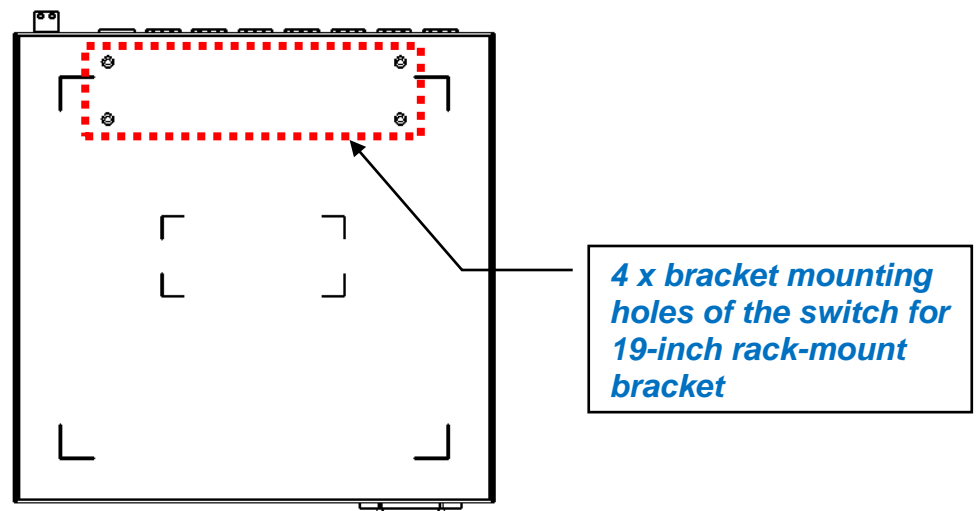


Figure 2-5. Bracket mounting holes located at the bottom of the switch

- 1.2. Insert the screws provided in the 19-inch rack-mount bracket through this bracket and into the bracket mounting holes at the bottom of the switch. (See Figure 2-6)
- 1.3. Tighten the screws with the screwdriver to secure this bracket.

Step 2. On the other switch that will be mounted on the right side of the rack space, do the following:

- 2.1. Also align four bracket mounting holes located at the bottom of this switch with the mounting holes on the most right side of the bracket you purchase.
- 2.2. Insert the screws provided in the 19-inch rack-mount bracket through this bracket and into these bracket mounting holes of the switch. (See Figure 2-6)
- 2.3. Tighten the screws with the screwdriver to secure this bracket.

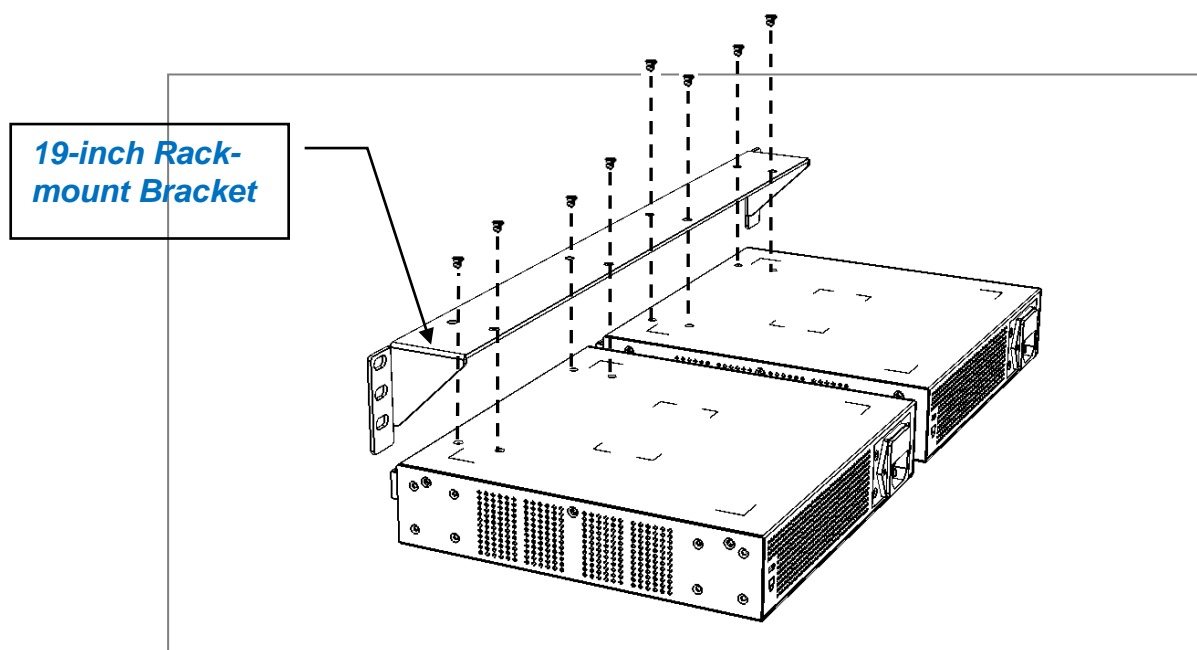


Figure 2-6. Install the 19-inch rack-mount bracket for two-switch mounting

- Step 3.** Align the mounting holes on both sides of this 19-inch rack-mount bracket with the desired holes in the rack, and insert the screws through this bracket and into the rack.
- Step 4.** Tighten the screws with the screwdriver to secure this bracket with the switch/switches to the rack.

2.4 Powering on the Managed Switch

The Managed Switch can be used with AC power supply 100-240 V, 50–60 Hz, 0.4A~0.2A. After the Managed Switch is turned on, the Power LED indicators should light in green color. For more details about the power LED description, please refer to Section [1.4 LED Definitions](#).

Power Failure

In the event of power failure, unplug the power that is plugged into the switch at the back of the device. When power is resumed, plug the power back to the switch.

2.5 Connecting the Managed Switch to the Network

Connect to Network

The Managed Switch has 8 SFP ports and 2 combo ports in the front panel. These 8 SFP ports can be plugged with 100Base-FX or 1000Base-X SFP Fiber transceiver. Uplink combo ports 9-10 can be plugged with 100Base-FX, 1000Base-X SFP Fiber transceiver or 10/100/1000Base-T UTP cable. The connection of the fiber port must be matched, i.e. Transmitter to Receiver, and vice versa.

3

Operation

A built-in management module of Managed Switch provides users flexible interfaces to configure, control and monitor the system remotely and locally. To know the further information about the operation of Managed Switch, please refer to FOS-3110 Network Management User's Manual for the detailed management functions and required installation and operation procedures.

3.1 Network Management

The following is a list of management options available in this Managed Switch:

- Local Console Management
- Telnet Management
- SNMP Management
- Web Management

Local Console Management

Users may connect a Terminal or PC running the Terminal Emulation program (such as Putty or Tera Term) with the following serial console port settings, to the Managed Switch console port directly via RS-232 cable to configure , control and monitor the system. This is often referred to as Out-Of-Band management.

Baud rate:	9600
Data bits:	8
Parity:	none
Stop bits:	1
Flow control:	none

Console management is useful when there is no network connection to the Switch, for instance configuring the Managed Switch for the first time.

Telnet Management

Telnet is done through the network. Once there is a network connection to the Managed Switch, users can use Telnet to configure, control and monitor the system. Using the network connection to manage is often referred to as In-Band-Management.

SNMP Management

SNMP is also In-Band-Management and requires a network connection to the Managed Switch. The Managed Switch private Management Information Bases (MIB) is provided for SNMP-based network management program to configure, control and monitor the system.

Web Management

Web Management is done over the network. Once the Managed Switch is available on the network, you can login and monitor the status of it through a web browser remotely or locally. Local console-type Web management, especially for the first time use of the Managed Switch to set up the needed IP, can also be done through one of the 10/100/1000Base-T 8-pin RJ-45 ports located on the front panel of the Managed Switch. Direct RJ-45 LAN cable connection between a PC and the Managed Switch is required for this management.

4

Maintenance

This Managed Switch is easy to maintain. The procedures are suggested when you would like to identify faults, perform hardware replacement and firmware upgrade.

4.1 Fault Identification

Identifying faults can greatly reduce the times required to find problem and solution. Users may perform local check or remote check to find the problems.

4.1.1 Local Check

Users can perform local check by observing LED indicators status or check system setup and configuration through console connection.

- When the whole system fails to function,
 1. Check Power LED status
 2. Check Power connection
 3. Reset power
- When certain network link fails to function,
 1. Locate the port of the switch
 2. Check LINK/ACT/Speed LED of the port
 3. Check Status LED of the port
 4. Check cable connection between the port and the connected device
 5. Reset power
- When local Console fails to function,
 1. Check COM LED status
 2. Check Console port connection
 3. Check Console configuration
 4. Reset power

4.1.2 Remote Check

Users may check the Managed Switch through SNMP manager remotely. For detailed procedures, please refer to the Network Management User's Manual.

4.2 Hardware Replacement Procedures



WARNING!

The Managed Switch contains no user-serviceable parts. DO NOT, UNDER ANY CIRCUMSTANCES, open and attempt to repair it.

Failure to observe this warning could result in personal injury or death from electrical shock.

Failure to observe the above warning will immediately void any Warranty.

4.3 Firmware Upgrade

This Managed Switch may perform the firmware upgrade when required. The latest firmware can be obtained from your sales representative. For the detailed upgrade procedures, please refer to FOS-3110 Network Management User's Manual.



CONNECTION TECHNOLOGY SYSTEMS

18F-6, No.79, Sec.1, Xintai 5th Rd.,
XiZhi Dist., New Taipei City 221, Taiwan(R.O.C)

Tel: +886-2-2698-9661

Fax: +886-2-2698-9662

Dir.Line:+886-2-2698-9201

www.ctsystem.com